


# Astragal Brush Seal

Worksheet [R. 11.2014]

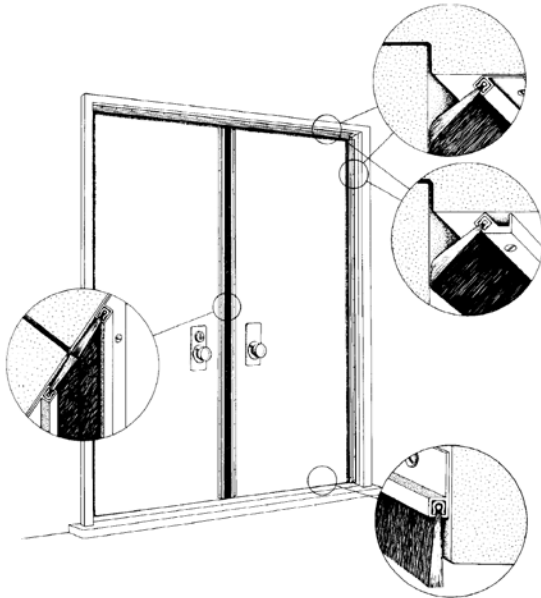

Contact Name: \_\_\_\_\_

Company Name: \_\_\_\_\_

Phone: \_\_\_\_\_

Fax: \_\_\_\_\_


Email: \_\_\_\_\_

1. Measure the height of the door along the inside edge (indicate in. or mm): \_\_\_\_\_
2. Measure the gap between the inside edges of the doors (indicate in. or mm): \_\_\_\_\_
3. Determine what color or finish you want for the brush holder (gold, silver, dark brown): \_\_\_\_\_
4. Select the proper astragal seal Product Code based on the color/finish desired, the door height and the gap to be sealed. Indicate the quantity needed: \_\_\_\_\_

## ASTRAGAL SEAL KITS

| Product Code         | Holder Color   | Door Height |       | Seals Gaps Up To |        |
|----------------------|----------------|-------------|-------|------------------|--------|
|                      |                | ft          | m     | in               | mm     |
| <b>A180CLA04BL14</b> | clear (silver) | 7.000       | 2.134 | 0.625            | 15.875 |
| <b>A180DUR04BL14</b> | dark brown     | 7.000       | 2.134 | 0.625            | 15.875 |
| <b>A180GLD04BL14</b> | Brass (gold)   | 7.000       | 2.134 | 0.625            | 15.875 |
| <b>C380CLA06BL14</b> | clear (silver) | 7.000       | 2.134 | 1.000            | 25.400 |
| <b>C380DUR06BL14</b> | dark brown     | 7.000       | 2.134 | 1.000            | 25.400 |
| <b>C380GLD06BL14</b> | Brass (gold)   | 7.000       | 2.134 | 1.000            | 25.400 |
| <b>A180CLA04BL16</b> | clear (silver) | 8.000       | 2.438 | 0.625            | 15.875 |
| <b>A180DUR04BL16</b> | dark brown     | 8.000       | 2.438 | 0.625            | 15.875 |
| <b>A180GLD04BL16</b> | Brass (gold)   | 8.000       | 2.438 | 0.625            | 15.875 |
| <b>C380CLA06BL16</b> | clear (silver) | 8.000       | 2.438 | 1.000            | 25.400 |
| <b>C380DUR06BL16</b> | dark brown     | 8.000       | 2.438 | 1.000            | 25.400 |
| <b>C380GLD06BL16</b> | Brass (gold)   | 8.000       | 2.438 | 1.000            | 25.400 |

Refer to the appropriate Sealeze Worksheet for Door Jambs.

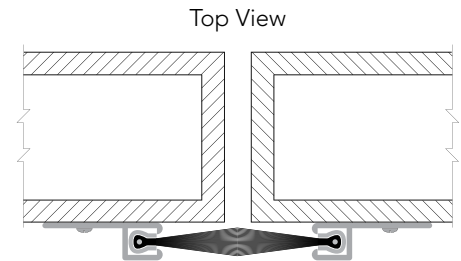

**Note:** Install astragal brush seals so that when the doors close the brushes just touch. Do not overlap. If door sweeps are installed, astragal brush seals should be installed on the opposite side of the door.



Sealeze Nylon Therm-L-Brush® up to 4 in. long are UL labeled for use on 3-hour fire doors.